




DYNA-SKIM™ AUTOMATIC SKIMMER

Owner's Manual

MODELS: SP1091LX and SP1091WM

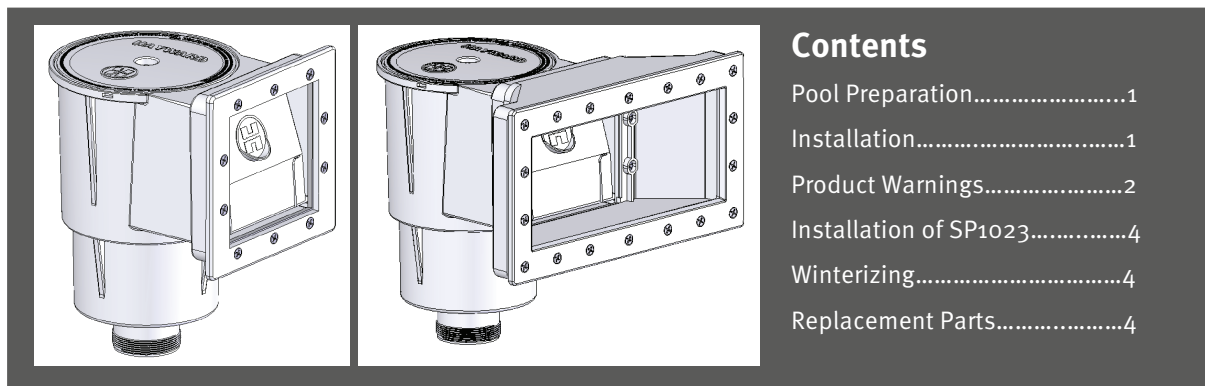

Contents

Pool Preparation.....	1
Installation.....	1
Product Warnings.....	2
Installation of SP1023.....	4
Winterizing.....	4
Replacement Parts.....	4

Your new Hayward Thru-Wall Skimmer makes pool maintenance easier and more convenient. Leaves, insects and floating debris are pulled from the pool into the skimmer basket. Clean the basket regularly to keep your pool sparkling clean and sanitary.

POOL PREPARATION

Fill the pool with approximately two (2) feet of water so the liner is under weight and stretched to the proper position prior to installing the skimmer. **Note: The liner cannot be shifted after the skimmer and return holes have been cut.**

SKIMMER ASSEMBY

1. If the SP1091E, Wide mouth extension, is not installed on the body, it must be assembled to the body prior to attempting to install the skimmer in the pool.
2. To install the wide mouth extension, insert four (4) pan head screws 1" long through the lip of the extension and four (4) through the throat of the skimmer. Place the gasket between the extension and the skimmer body. Firmly tighten the screws.

SKIMMER INSTALLATION

1. From the outside of the pool install the face-plate double gasket at skimmer cutout in the wall. Reach over the top rail of the pool and carefully press the face-plate and liner against the gasket and skimmer cutout in the wall. Punch out the two top corner holes using a blunt object. Insert two self-threading flat head screws (provided) into the top corner holes of the face-plate.
2. Carefully push the screws through the holes that have been pierced in the liner and through the double gasket. From the outside of the pool, align the skimmer body with these screws. Lightly tighten the two screws.
3. Using a blunt object, pierce the remaining holes in the liner. Insert and lightly tighten the remaining flat head screws through the face-plate, liner, gasket and into the corresponding holes on the skimmer. Firmly tighten all screws evenly, alternately left and right, top and bottom.
4. Using the skimmer face plate as a guide, use a razor knife to trim only the liner, being careful not to the gasket, in the large skimmer opening.

IMPORTANT SAFETY INSTRUCTIONS

Basic safety precautions should always be followed, including the following: Failure to follow instructions can cause severe injury and/or death.

- ▲ This is the safety-alert symbol. When you see this symbol on your equipment or in this manual, look for one of the following signal words and be alert to the potential for personal injury.
- ▲ **WARNING** warns about hazards that **could** cause serious personal injury, death or major property damage and if ignored presents a potential hazard.
- ▲ **CAUTION** warns about hazards that **will** or **can** cause minor or moderate personal injury and/or property damage and if ignored presents a potential hazard. It can also make consumers aware of actions that are unpredictable and unsafe.

The **NOTICE** label indicates special instructions that are important but not related to hazards.

Hayward Pool Products, 620 Division Street, Elizabeth, NJ 07207
 Phone: (908) 355-7995
www.hayward.com



⚠ WARNING - Read and follow all instructions in this owner's manual and on the equipment. Failure to follow instructions can cause severe injury and/or death.

⚠ WARNING – Suction Entrapment Hazard.



Suction in suction outlets and/or suction outlet covers which are, damaged, broken, cracked, missing, or unsecured can cause severe injury and/or death due to the following entrapment hazards:



Hair Entrapment- Hair can become entangled in suction outlet cover.



Limb Entrapment- A limb inserted into an opening of a suction outlet sump or suction outlet cover that is damaged, broken, cracked, missing, or not securely attached can result in a mechanical bind or swelling of the limb.




Body Suction Entrapment- A negative pressure applied to a large portion of the body or limbs can result in an entrapment.



Evisceration/ Disembowelment - A negative pressure applied directly to the intestines through an unprotected suction outlet sump or suction outlet cover which is, damaged, broken, cracked, missing, or unsecured can result in evisceration/ disembowelment.

Mechanical Entrapment- There is potential for jewelry, swimsuit, hair decorations, finger, toe or knuckle to be caught in an opening of a suction outlet cover resulting in mechanical entrapment.

⚠ WARNING - To Reduce the risk of Entrapment Hazards:

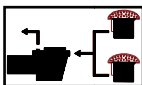

- o When outlets are small enough to be blocked by a person, a minimum of two functioning suction outlets per pump must be installed. Suction outlets in the same plane (i.e. floor or wall), must be installed a minimum of three feet (3') [1 meter] apart, as measured from near point to near point.
- o Dual suction fittings shall be placed in such locations and distances to avoid “dual blockage” by a user.
- o Dual suction fittings shall not be located on seating areas or on the backrest for such seating areas.
- o Never use Pool or Spa if any suction outlet component is damaged, broken, cracked, missing, or not securely attached.
- o Replace damaged, broken, cracked, missing, or not securely attached suction outlet components immediately.
- o In addition two or more suction outlets per pump installed in accordance with latest ASME, APSP Standards and CPSC guidelines, follow all National, State, and Local codes applicable.
- o Installation of a vacuum release or vent system, which relieves entrapping suction, is recommended.

⚠ WARNING – Failure to remove pressure test plugs and/or plugs used in winterization of the pool/spa from the suction outlets can result in an increase potential for suction entrapment as described above.

⚠ WARNING – Failure to keep suction outlet components clear of debris, such as leaves, dirt, hair, paper and other material can result in an increase potential for suction entrapment as described above.

⚠ WARNING – Suction outlet components have a finite life, the cover/grate should be inspected frequently and replaced at least every seven years or if found to be damaged, broken, cracked, missing, or not securely attached.

⚠ CAUTION – Components such as the filtration system, pumps and heater must be positioned so as to prevent their being used as means of access to the pool by young children. To reduce risk of injury, do not permit children to use or climb on this product. Closely supervise children at all times. Components such as the filtration system, pumps, and heaters must be positioned to prevent children from using them as a means of access to the pool.



⚠ WARNING – Hazardous Pressure. Pool and spa water circulation systems operate under hazardous pressure during start up, normal operation, and after pump shut off. Stand clear of circulation system equipment during pump start up. Failure to follow safety and operation instructions could result in violent separation of the pump housing and cover, and/or filter housing and clamp due to pressure in the system, which could cause property damage, severe personal injury, or death. Before servicing pool and spa water circulation system, all system and pump controls must be in off position and filter manual air relief valve must be in open position. Before starting system pump, all system valves must be set in a position to allow system water to return back to the pool. Do not change filter control valve position while system pump is running. Before starting system pump, fully open filter manual air relief valve. Do not close filter manual air relief valve until a steady stream of water (not air or air and water) is discharged.



⚠ WARNING – Separation Hazard. Failure to follow safety and operation instructions could result in violent separation of pump and/or filter components. Strainer cover must be properly secured to pump housing with strainer cover lock ring. Before servicing pool and spa circulation system, filters manual air relief valve must be in open position. Do not operate pool and spa circulation system if a system component is not assembled properly, damaged, or missing. Do not operate pool and spa circulation system unless filter manual air relief valve body is in locked position in filter upper body. **Never operate or test the circulation system at more than 50 PSI. Do not purge the system with compressed air.** Purging the system with compressed air can cause components to explode, with risk of severe injury or death to anyone nearby. Use only a low pressure (below 5 PSI), high volume blower when air purging the pump, filter, or piping.



HAYWARD®



⚠ WARNING – Risk of Electric Shock. All electrical wiring **MUST** be in conformance with applicable local codes, regulations, and the National Electric Code (NEC). Hazardous voltage can shock, burn, and cause death or serious property damage. To reduce the risk of electric shock, do **NOT** use an extension cord to connect unit to electric supply. Provide a properly located electrical receptacle. Before working on any electrical equipment, turn off power supply to the equipment. To reduce the risk of electric shock replace damaged wiring immediately. Locate conduit to prevent abuse from lawn mowers, hedge trimmers and other equipment. Do **NOT** ground to a gas supply line.

⚠ WARNING – Risk of Electric Shock Failure to ground all electrical equipment can cause serious or fatal electrical shock hazard. Electrical ground all electrical equipment before connecting to electrical power supply.

⚠ WARNING – Risk of Electric Shock Failure to bond all electrical equipment to pool structure will increase risk for electrocution and could result in injury or death. To reduce the risk of electric shock, see installation instructions and consult a professional electrician on how to bond all electrical equipment. Also, contact a licensed electrician for information on local electrical codes for bonding requirements.

Notes to electrician: Use a solid copper conductor, size 8 or larger. Run a continuous wire from external bonding lug to reinforcing rod or mesh. Connect a No. 8 AWG (8.4 mm²) [No. 6 AWG (13.3 mm²) for Canada] solid copper bonding wire to the pressure wire connector provided on the electrical equipment and to all metal parts of swimming pool, spa, or hot tub, and metal piping (except gas piping), and conduit within 5 ft. (1.5 m) of inside walls of swimming pool, spa, or hot tub.

IMPORTANT - Reference NEC codes for all wiring standards including, but not limited to, grounding, bonding and other general wiring procedures.

⚠ WARNING – Risk of Electric Shock . The electrical equipment must be connected only to a supply circuit that is protected by a ground-fault circuit-interrupter (GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the electrical equipment without the test button being pushed, a ground current is flowing, indicating the possibility of an electrical shock. Do not use this electrical equipment. Disconnect the electrical equipment and have the problem corrected by a qualified service representative before using.

⚠ CAUTION – HAYWARD® pumps are intended for use with permanently-installed pools and may be used with hot tubs and spas if so marked. Do not use with storable pools. A permanently-installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage. A storable pool is constructed so that it is capable of being readily disassembled for storage and reassembled to its original integrity.

⚠ WARNING – Risk of Hyperthermia. To avoid hyperthermia the following “Safety Rules for Hot Tubs” are recommended by the U.S. Consumer Product Safety Commission.

1. Spa or hot tub water temperatures should never exceed 104°F [40°C]. A temperature of 100°F [38°C] is considered safe for a healthy adult. Special caution is suggested for young children. Prolonged immersion in hot water can induce hyperthermia.
2. Drinking of alcoholic beverages before or during spa or hot tub use can cause drowsiness, which could lead to unconsciousness and subsequently result in drowning.
3. Pregnant women beware! Soaking in water above 100°F [38°C] can cause fetal damage during the first three months of pregnancy (resulting in the birth of a brain-damaged or deformed child). Pregnant women should adhere to the 100°F [38°C] maximum rule.
4. Before entering the spa or hot tub, users should check the water temperature with an accurate thermometer; spa or hot tub thermostats may err in regulating water temperatures by as much as 4°F (2.2°C).
5. Persons taking medications, which induce drowsiness, such as tranquilizers, antihistamines or anti-coagulants, should not use spas or hot tubs.
6. If the pool/spa is used for therapy, it should be done with the advice of a physician. Always stir pool/ spa water before entering the pool/spa to mix in any hot surface layer of water that might exceed healthful temperature limits and cause injury. Do not tamper with controls, because scalding can result if safety controls are not in proper working order.
7. Persons with a medical history of heart disease, circulatory problems, diabetes or blood pressure problems should obtain a physicians advice before using spas or hot tubs.
8. Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above normal body temperature of 98.6°F [37°C]. The symptoms of Hyperthermia include: drowsiness, lethargy, dizziness, fainting, and an increase in the internal temperature of the body.

The effects of Hyperthermia include:


1. Unawareness of impending danger.
2. Failure to perceive heat.
3. Failure to recognize the need to leave the spa.
4. Physical inability to exit the spa.
5. Fetal damage in pregnant women.
6. Unconsciousness resulting in danger of drowning.

SAVE THESE INSTRUCTIONS



RETURN FITTING INSTALLATION (From the Pump to the Pool)

1. The return fitting furnished with these skimmers is a SP1023. The hole required through the pool wall to install this fitting is 2.38±.03 inches. **DO NOT CUT THE LINER.**
2. Place one rubber gasket over the threads of the return fitting adapter and push the threaded end against the liner and through the return cutout in the wall.
3. Applying outward pressure to the return fitting cut and “X” in the center of the exposed liner from outside the pool. The return fitting will now be fully pressed against the liner and the wall on the inside of the pool. Using a razor knife, trim the excess liner material from around the fitting threads on the outside of the pool.
4. Place the second rubber gasket and then the cork gasket over the threads of the return fitting now exposed outside of the pool. Screw on the lock nut and tighten.
5. Screw on the adjustable directional ball fitting into the face of the return fitting from the outside of the pool. Position ball fitting opening away from skimmer opening. Do not over-tighten.

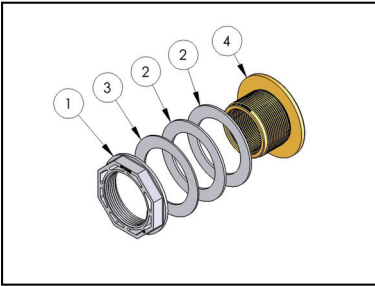

Note: On-going leaks from the skimmer or wall fittings may cause pool wall damage that eventually may result in pool wall failure.

RECOMMENDED WINTERIZING PROCEDURE

Drain pool level approximately six inches (6”) below skimmer opening. Remove Hydrostream Eyeball fitting and securely plug wall fitting (1 1/2” threaded plugs are available from the dealer). Disconnect filter hoses from the skimmer and the wall fitting. Be sure that the skimmer is kept free of water accumulation. Warranty does not include damage caused by the formation of ice in the skimmer.

TO CLEAN SKIMMER BASKET


Remove top cover; or fold weir forward and squeeze tabs toward center to remove weir. Remove and clean basket.

Deluxe Skim-Vac Accessory


SKIM-VAC attaches to vac hose and is inserted in skimmer over basket, allowing you to conveniently vacuum through the skimmer basket.

TO-VACUUM WITH SKIM-VAC

1. Remove weir from front of skimmer.
2. Attach vacuum hose to vac head and handle, and fill vacuum hose with water (place over pool inlet). Place SKIM-VAC over skimmer basket. Going through the skimmer opening in the pool wall, attach the vacuum hose to the SKIM-VAC hose adapter.
3. Hold SKIM-VAC in place until any air hose is evacuated by pump. Once air is removed, the pump suction will hold the SKIM-VAC firmly in place.

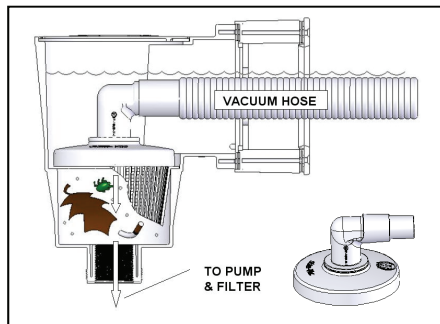

Take care not to damage or scuff the Skim-Vac’s specially designed seal surface.

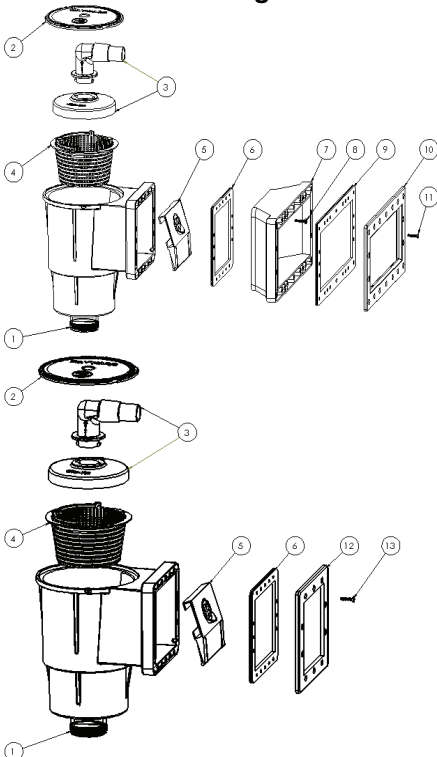

SPARE PARTS FOR SP1091WM			
REF	PART #	DESCRIPTION	REQUIRED
1	-----	Skimmer Body	N/A
2	SPX1091B	Cover	1
3	SP11041	Skim Vac	1
4	SPX1091C	Basket w/ Handle	1
5	SPX1091K1	Weir	1
6	SPX1091G	Standard Butterfly Gasket	1
7	SPX1091E	Widemouth Extension	1
8	SPX1090Z7A	Extension	1 Set
9	SPX1091GW	Widemouth Butterfly Gasket	1
10	SPX1091F	Widemouth Face Plate	1
11	SPX1090Z7A	Face Plate Screw Pack (Includes screws for extension)	1 Set
	SP1500UNPAK2	Union Set for using Outside Threads	

SPARE PARTS FOR SP1091LX			
REF	PART #	DESCRIPTION	REQUIRED
1	-----	Skimmer Body	N/A
2	SPX1091B	Cover	1
3	SP11041	Skim Vac	1
4	SPX1091C	Basket w/ Handle	1
5	SPX1091K1	Weir	1
6	SPX1091G	Standard Butterfly Gasket	1
12	SPX1091D	Face Plate	1
13	SPX1090Z6A	Face Plate Screw Pack	1 Set